


YALE SCIENCE BUILDING

TYPICAL FUMEHOOD DISPLAY BASIC OPERATION

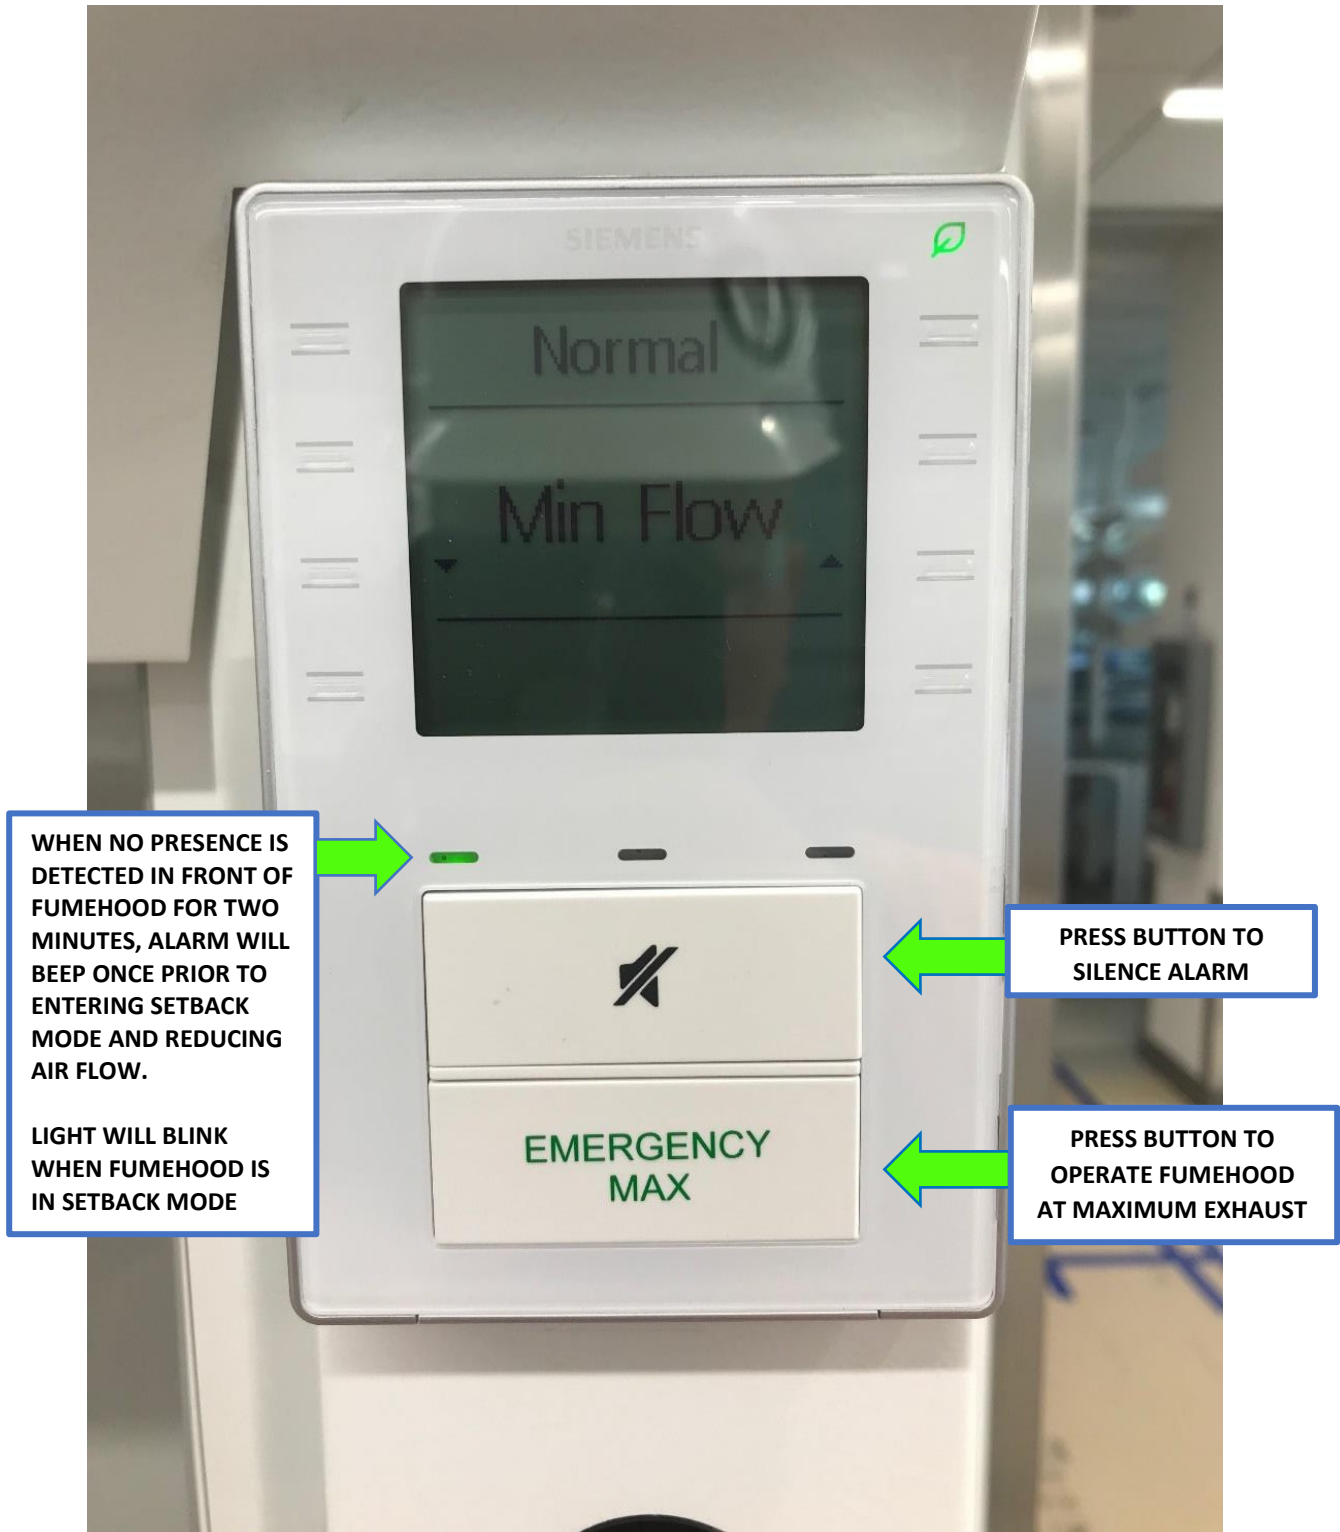

WHEN NO PRESENCE IS DETECTED IN FRONT OF FUMEHOOD FOR TWO MINUTES, ALARM WILL BEEP ONCE PRIOR TO ENTERING SETBACK MODE AND REDUCING AIR FLOW.

LIGHT WILL BLINK WHEN FUMEHOOD IS IN SETBACK MODE

PRESS BUTTON TO SILENCE ALARM

PRESS BUTTON TO OPERATE FUMEHOOD AT MAXIMUM EXHAUST